

CONVECTORS



ADB/ASH/CSH/DSH/APH/CPH/DPH

| Description | Part Number | | | |
|--|---------------|---------------|---------------|---------------|
| | 120V | 208V | 240V | 277V |
| *Element (125 watts/ft.) 28" Heater | 1802-2001-085 | 1802-2001-086 | 1802-2001-048 | 1802-2001-049 |
| 3' | 1802-2001-087 | 1802-2001-088 | 1802-2001-054 | 1802-2001-055 |
| 4' | 1802-2001-089 | 1802-2001-090 | 1802-2001-060 | 1802-2001-061 |
| 5' | 1802-2001-091 | 1802-2001-092 | 1802-2001-066 | 1802-2001-067 |
| 6' | 1802-2001-093 | 1802-2001-094 | 1802-2001-072 | 1802-2001-073 |
| 8' | — | 1802-2001-095 | 1802-2001-077 | 1802-2001-078 |
| 10' | — | 1802-2001-096 | 1802-2001-081 | 1802-2001-082 |
| *Element (188 watts/ft.) 28" Heater | 1802-2001-005 | 1802-2001-002 | 1802-2001-001 | 1802-2001-000 |
| 3' | 1802-2001-011 | 1802-2001-008 | 1802-2001-007 | 1802-2001-006 |
| 4' | 1802-2001-017 | 1802-2001-014 | 1802-2001-013 | 1802-2001-012 |
| 5' | 1802-2001-023 | 1802-2001-020 | 1802-2001-019 | 1802-2001-018 |
| 6' | 1802-2001-029 | 1802-2001-026 | 1802-2001-025 | 1802-2001-024 |
| 8' | — | 1802-2001-032 | 1802-2001-031 | 1802-2001-030 |
| 10' | — | 1802-2001-036 | 1802-2001-035 | 1802-2001-034 |
| *Element (250 watts/ft.) 28" Heater | 1802-2001-004 | 1802-2001-003 | 1802-2001-002 | 1802-2001-001 |
| 3' | 1802-2001-010 | 1802-2001-009 | 1802-2001-008 | 1802-2001-007 |
| 4' | 1802-2001-016 | 1802-2001-015 | 1802-2001-014 | 1802-2001-013 |
| 5' | 1802-2001-022 | 1802-2001-021 | 1802-2001-020 | 1802-2001-019 |
| 6' | 1802-2001-028 | 1802-2001-027 | 1802-2001-026 | 1802-2001-025 |
| 8' | — | 1802-2001-033 | 1802-2001-032 | 1802-2001-031 |
| 10' | — | 1802-2001-037 | 1802-2001-036 | 1802-2001-035 |
| Overload Protector: 28" Heater | 4520-0007-007 | | | |
| 3' | 4520-0007-008 | | | |
| 4' | 4520-0007-009 | | | |
| 5' | 4520-0007-010 | | | |
| 6' | 4520-0007-011 | | | |
| 8' | 4520-0007-012 | | | |
| 10' | 4520-0007-013 | | | |

* 1, 2, or 3 elements may be required. Voltage and wattage are stamped on end of elements. Divide the wattage by the heater length (feet) to determine watts/foot of element. Then use this data to determine part number of heating element.

Built-in Controls (Optional)

| Key No. | Description | Part Number |
|---------|---------------------------|---------------|
| 1 | Master Control: 208V/240V | 1414-0038-000 |
| | 277V | 1414-0038-001 |
| 2 | Slave: 208V/240V | 1414-0039-000 |
| | 277V | 1414-0039-001 |
| 3 | SCR Thermostat | 5813-0017-000 |

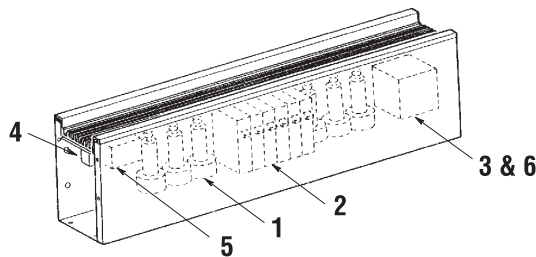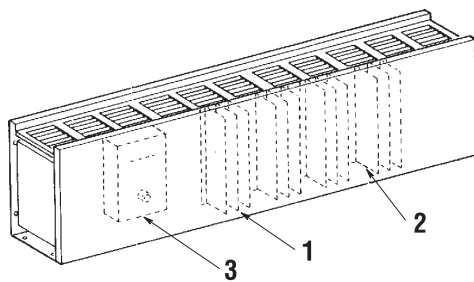

| Key No. | Description | Part Number |
|---------|--------------------------------------|---------------|
| 1 | Mercury Relay: 1-Pole, 30A, 24V Coil | 5018-7050-001 |
| | 1-Pole, 60A, 24V Coil | 5018-7049-001 |
| | 1-Pole, 30A, 120V Coil | 5018-7050-002 |
| | 1-Pole, 60A, 120V Coil | 5018-7049-002 |
| | 1-Pole, 30A, 208V Coil | 5018-7050-003 |
| | 1-Pole, 60A, 208V Coil | 5018-7049-003 |
| | 1-Pole, 30A, 240V Coil | 5018-7050-004 |
| | 1-Pole, 60A, 240V Coil | 5018-7049-004 |
| | 1-Pole, 30A, 277V Coil | 5018-7050-005 |
| | 1-Pole, 60A, 277V Coil | 5018-7049-005 |
| 2 | Circuit Breaker: 2-Pole, 30A | 1226-7009-013 |
| | 2-Pole, 60A | 1226-7009-010 |
| | 3-Pole, 30A | 1226-7009-005 |
| | 3-Pole, 60A | 1226-7009-002 |
| 3 | 24V Transformer: | — |
| | 208V Primary | 490026001 |
| | 240V Primary | 490026001 |
| | 277V Primary | 490026002 |
| 4 | Disconnect Switch | 5216-0124-000 |
| 5 | Thermostat: 1-Pole | 5813-0024-000 |
| | 2-Stage | 5813-0023-000 |
| 6 | Pneumatic Control | 5216-7027-001 |
| — | Transformer Relay: 120V | R13700002B001 |
| | 208V | R13700002B002 |
| | 240V | R13700002B003 |
| | 277V | R13700002B004 |
| — | Power Relay: 24V | 5018-2021-000 |
| | 120V | 5018-2017-001 |
| | 208V/240V | 5018-2021-002 |
| | 277V | 5018-2021-003 |