

# CONVECTORS



## ADB/ASH/CSH/DSH/APH/CPH/DPH

Description	Part Number			
	120V	208V	240V	277V
*Element (125 watts/ft.) 28" Heater	1802-2001-085	1802-2001-086	1802-2001-048	1802-2001-049
3'	1802-2001-087	1802-2001-088	1802-2001-054	1802-2001-055
4'	1802-2001-089	1802-2001-090	1802-2001-060	1802-2001-061
5'	1802-2001-091	1802-2001-092	1802-2001-066	1802-2001-067
6'	1802-2001-093	1802-2001-094	1802-2001-072	1802-2001-073
8'	—	1802-2001-095	1802-2001-077	1802-2001-078
10'	—	1802-2001-096	1802-2001-081	1802-2001-082
*Element (188 watts/ft.) 28" Heater	1802-2001-005	1802-2001-002	1802-2001-001	1802-2001-000
3'	1802-2001-011	1802-2001-008	1802-2001-007	1802-2001-006
4'	1802-2001-017	1802-2001-014	1802-2001-013	1802-2001-012
5'	1802-2001-023	1802-2001-020	1802-2001-019	1802-2001-018
6'	1802-2001-029	1802-2001-026	1802-2001-025	1802-2001-024
8'	—	1802-2001-032	1802-2001-031	1802-2001-030
10'	—	1802-2001-036	1802-2001-035	1802-2001-034
*Element (250 watts/ft.) 28" Heater	1802-2001-004	1802-2001-003	1802-2001-002	1802-2001-001
3'	1802-2001-010	1802-2001-009	1802-2001-008	1802-2001-007
4'	1802-2001-016	1802-2001-015	1802-2001-014	1802-2001-013
5'	1802-2001-022	1802-2001-021	1802-2001-020	1802-2001-019
6'	1802-2001-028	1802-2001-027	1802-2001-026	1802-2001-025
8'	—	1802-2001-033	1802-2001-032	1802-2001-031
10'	—	1802-2001-037	1802-2001-036	1802-2001-035
Overload Protector: 28" Heater	4520-0007-007			
3'	4520-0007-008			
4'	4520-0007-009			
5'	4520-0007-010			
6'	4520-0007-011			
8'	4520-0007-012			
10'	4520-0007-013			

\* 1, 2, or 3 elements may be required. Voltage and wattage are stamped on end of elements. Divide the wattage by the heater length (feet) to determine watts/foot of element. Then use this data to determine part number of heating element.

### Built-in Controls (Optional)

Key No.	Description	Part Number
1	Master Control: 208V/240V	1414-0038-000
	277V	1414-0038-001
2	Slave: 208V/240V	1414-0039-000
	277V	1414-0039-001
3	SCR Thermostat	5813-0017-000

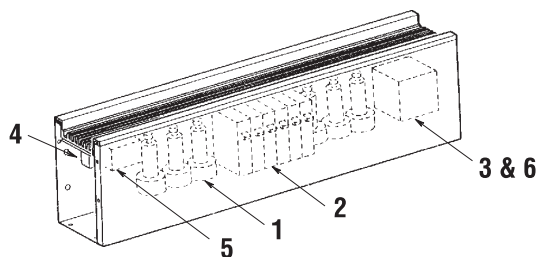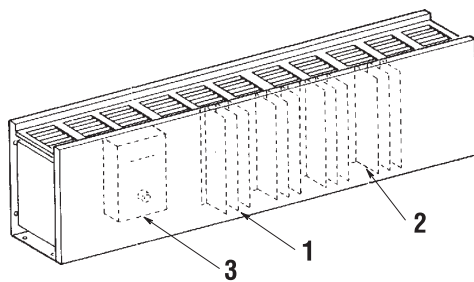

Key No.	Description	Part Number
1	Mercury Relay: 1-Pole, 30A, 24V Coil	5018-7050-001
	1-Pole, 60A, 24V Coil	5018-7049-001
	1-Pole, 30A, 120V Coil	5018-7050-002
	1-Pole, 60A, 120V Coil	5018-7049-002
	1-Pole, 30A, 208V Coil	5018-7050-003
	1-Pole, 60A, 208V Coil	5018-7049-003
	1-Pole, 30A, 240V Coil	5018-7050-004
	1-Pole, 60A, 240V Coil	5018-7049-004
	1-Pole, 30A, 277V Coil	5018-7050-005
	1-Pole, 60A, 277V Coil	5018-7049-005
2	Circuit Breaker: 2-Pole, 30A	1226-7009-013
	2-Pole, 60A	1226-7009-010
	3-Pole, 30A	1226-7009-005
	3-Pole, 60A	1226-7009-002
3	24V Transformer:	—
	208V Primary	490026001
	240V Primary	490026001
	277V Primary	490026002
4	Disconnect Switch	5216-0124-000
5	Thermostat: 1-Pole	5813-0024-000
	2-Stage	5813-0023-000
6	Pneumatic Control	5216-7027-001
—	Transformer Relay: 120V	R13700002B001
	208V	R13700002B002
	240V	R13700002B003
	277V	R13700002B004
—	Power Relay: 24V	5018-2021-000
	120V	5018-2017-001
	208V/240V	5018-2021-002
	277V	5018-2021-003